


PROJECT NAME: _____
LOCATION: _____
SPECIFIER ITEM NO. _____ **QTY:** _____
ENCORE PART NO. _____

Encore® Lever Handle Box Pattern Drain D23-415x Series

D23-4150 2" NPS
 D23-4151 1-1/2" NPS

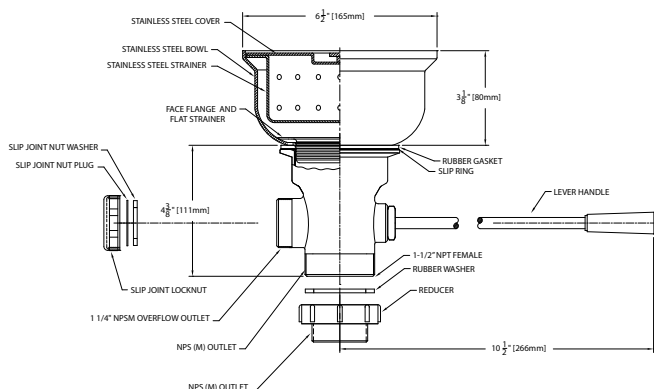

*Dimensions shown in inches (mm) are for reference only
 and are subject to change.*

Approximate shipping weight - 7 lbs

Solid heavy duty drain is specification and commercial quality

Commercial Quality Features

- Stainless steel basket assembly
- Multiple strainer
- Removable basket
- Easy cleanout
- Normal servicing prevents clogging; eliminates costly plumbing repairs
- Flow rate up to 15 gallons per minute

SPECIFICATIONS:

Lever handle box pattern drain to be Encore D23 Series in the following configuration:

_____ D23-4150 2" NPS
 _____ D23-4151 1-1/2" NPS with reducer (to 1-1/2" NPT)

Drain to be nickel plated cast brass construction with threaded waste outlet and reducer. Heavy duty basket assembly fits a 6-1/2" sink opening. Basket assembly comes complete with a stainless steel bowl, strainer basket and cover, secured to the top of the drain by a self-centering stainless steel face flange with snap-in stainless steel strainer. Drain is designed for trouble-free fast drainage when the stainless steel lever handle is in the open position. Positive sealing action when handle is closed. Drain to include 1-1/4" overflow port for overflow assembly when required (not included).