



1890 Swarthmore Avenue, PO Box 2020, Lakewood, NJ 08701
Phone: 800-526-3694, 732-363-4700, Fax: 732-364-8110
www.encoreplumbing.com • www.componenthardware.com

PROJECT NAME: _____
LOCATION: _____
SPECIFIER ITEM NO. _____ **QTY:** _____
ENCORE PART NO. _____

Encore® Lever Handle Box Pattern Drain D23-416x Series

D23-4160 2" NPS
D23-4161 1-1/2" NPS



Solid heavy duty drain is specification and commercial quality

Commercial Quality Features


- Stainless steel basket assembly
- Multiple strainer
- Removable basket
- Easy cleanout
- Normal servicing prevents clogging; eliminates costly plumbing repairs
- Flow rate up to 15 gallons per minute

SPECIFICATIONS:

Lever handle box pattern drain to be Encore D23 Series in the following configuration:

_____ D23-4160 2" NPS
_____ D23-4161 1-1/2" NPS with reducer (to 1-1/2" NPT)

Drain to be nickel plated cast brass construction with threaded waste outlet and reducer. Heavy duty basket assembly fits a 6-1/2" sink opening. Basket assembly comes complete with a stainless steel bowl, strainer basket and cover, secured to the top of the drain by a self-centering stainless steel face flange with snap-in stainless steel strainer. Drain is designed for trouble-free fast drainage when the stainless steel lever handle is in the open position. Positive sealing action when handle is closed. Drain to include 1-1/4" overflow port for overflow assembly when required (not included).

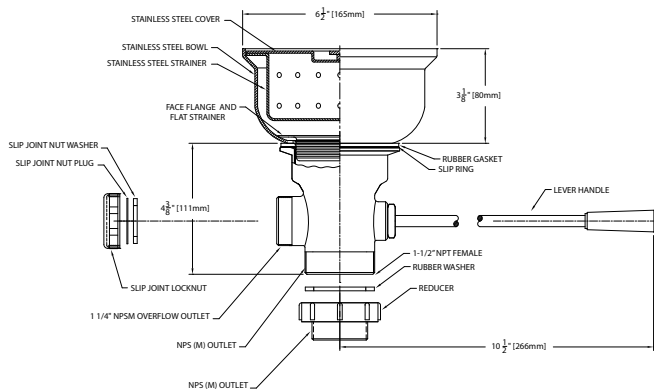

Dimensions shown in inches (mm) are for reference only and are subject to change.

Approximate shipping weight - 7 lbs