



1890 Swarthmore Avenue, PO Box 2020, Lakewood, NJ 08701
Phone: 800-526-3694, 732-363-4700, Fax: 732-364-8110
www.encoreplumbing.com • www.componenthardware.com

PROJECT NAME: _____

LOCATION: _____



SPECIFIER ITEM NO. _____ QTY: _____

ENCORE PART NO. _____

Encore® Twist Handle Waste Outlet with Overflow Outlet

D50-xxxx Series

D50-4150	2" NPS
D50-4151	1-1/2" NPS
D50-7110	1-1/2" NPS
D50-7210	2" NPS

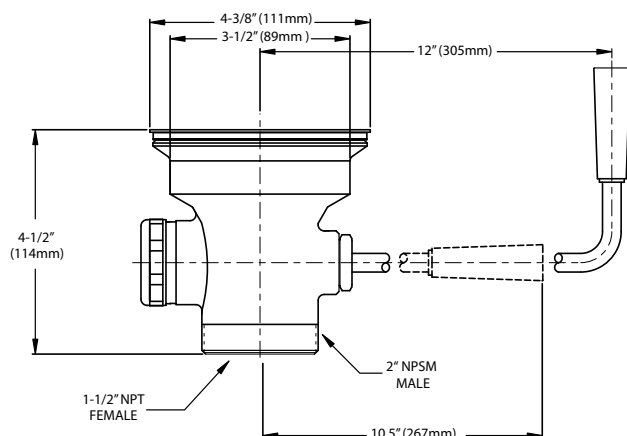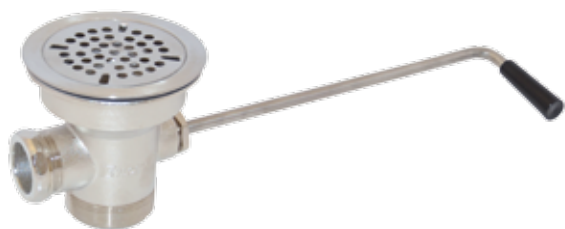

Dimensions shown in inches (mm) are for reference only and are subject to change.

2" and 1-1/2" NPS Male waste outlet
Flow Rate: Max 15gpm

Approximate shipping weight - 4 lbs
Warranty - 2 years parts

Solid heavy duty cast body is specification and commercial quality

Commercial Quality Features

- Nickel plated cast brass drain body
- Self-centering stainless steel face flange
- Stainless steel twist handle
- Overflow outlet port

SPECIFICATIONS:

Lever handle waste outlet to be Encore D50 Series in the following configuration:

_____	D50-4150	2" NPS
_____	D50-4151	1-1/2" NPS
_____	D50-7110	1-1/2" NPS
_____	D50-7210	2" NPS

Drain to have nickel plated solid all metal construction. D50-4150 and D50-4151 drains to be for 3" sink opening. D50-7110 and D50-7210 drains to be for 3-1/2" sink opening diameter. Drain to have self-centering stainless steel face flange with snap-in flat stainless steel strainer. Drain to be designed for trouble free fast drainage when the stainless steel lever handle is in the open position and has a positive sealing action when closed. Drain to have 1-1/4" overflow outlet to accept 1-1/4" OD overflow elbow tube.