

PROJECT NAME: _____

LOCATION: _____


SPECIFIER ITEM NO. _____ **QTY:** _____

ENCORE PART NO. _____

**Encore® Low Lead Deck Mount Double
Pantry Faucet with 18" (457mm)
Double Jointed Swing Spout**

KL52-9x18-SPx Series

KL52-9018-SP1	Compression valves, lever handles
KL52-9118-SP1	Ceramic valves, lever handles
KL52-9018-SP2	Compression valves, cross handles
KL52-9118-SP2	Ceramic valves, cross handles
KL52-9018-SP4	Compression valves, wrist blade handles
KL52-9118-SP4	Ceramic valves, wrist blade handles

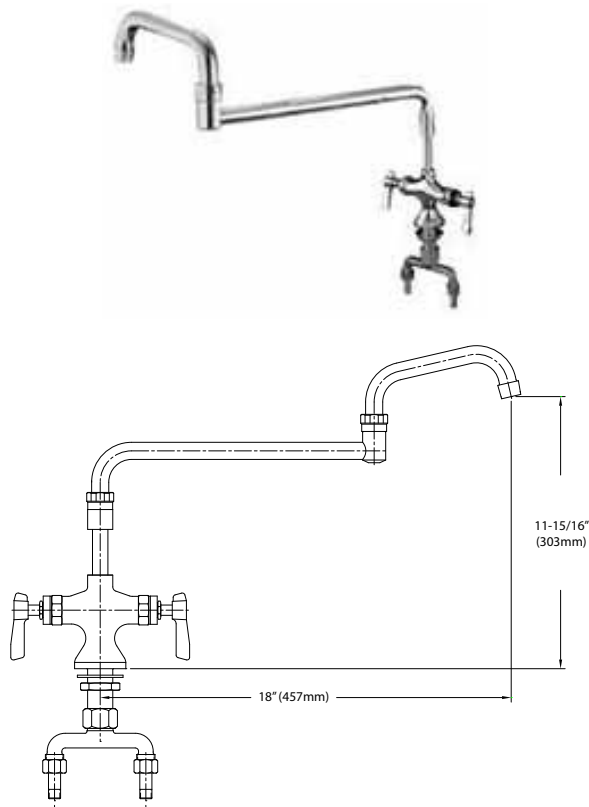

Dimensions shown in inches (mm) are for reference only
and are subject to change.

1/2" NPSM Male Inlets
Operating Temperature: 40-180°F (5-83°C)
Operating Pressure: 15-125psi
Note: 1-1/8" (29mm) holes for deck are recommended
to accommodate 1/2" supply nipples

Approximate shipping weight - 6 lbs
Warranty - 2 years parts

Solid heavy duty low lead cast body is specification and commercial quality

Commercial Quality Features

- Double jointed swing spout design
- ADA-compliant lever or 4" (102mm) wrist blade handles
- Built-in check valves to prevent cross-flow and back-flow

SPECIFICATIONS:

Low Lead Deck Mount Faucet to be Encore KL52-9x18-SPx Series
in the following configuration:

_____	KL52-9018-SP1	Compression Valves, Lever Handles
_____	KL52-9118-SP1	Ceramic Valves, Lever Handles
_____	KL45-9018-SP2	Compression Valves, Cross Handles
_____	KL45-9118-SP2	Ceramic Valves, Cross Handles
_____	KL45-9018-SP4	Compression Valves, Wrist Blade Handles
_____	KL45-9118-SP4	Ceramic Valves, Wrist Blade Handles

Faucet body to be constructed of polished chrome plated brass with total lead content less than 0.25% by weighted average. Valves to be 1/4-turn with integral check valve to prevent cross-flow and back-flow. Spout to be elevated double jointed tubular swing spout with leak proof double O-ring seal design. Color coded temperature indexes shall meet international standards. 2.2gpm PCA aerator @ 60psi standard with full flow stream bubbler screen spout tip.

COMPLIES WITH:

ASME A112.18.1-2005
CSA B125.1-05
NSF/ANSI 61/9, ANNEX G
SECTION 116875 OF THE
CALIFORNIA HEALTH & SAFETY CODE
(COMMONLY KNOWN AS AB1953)
VERMONT ACT 193
UNIFORM PLUMBING CODE

