


PROJECT NAME: _____
LOCATION: _____
SPECIFIER ITEM NO. _____ **QTY:** _____
ENCORE PART NO. _____

Encore® Low Lead Wall Mount Faucet with
Rigid Gooseneck Spout and 4" (102mm)
Wrist Blade Handles

KL54-8x0x-RE4 Series

KL54-8100-RE4 3" Spout, Ceramic Valves
KL54-8000-RE4 3" Spout, Compression Valves
KL54-8102-RE4 6" Spout, Ceramic Valves
KL54-8002-RE4 6" Spout, Compression Valves
KL54-8101-RE4 8" Spout, Ceramic Valves
KL54-8001-RE4 8" Spout, Compression Valves

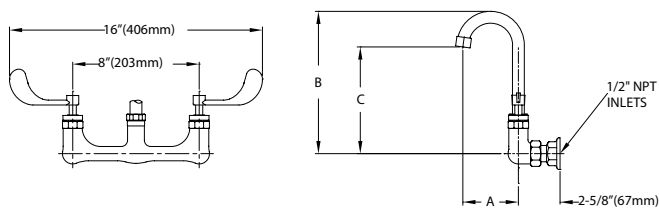

Dimensions shown in inches (mm) are for reference only
and are subject to change.

1-1/2" (29mm) holes for backsplash are recommended
to accommodate 1/2" supply nipples.

1/2" NPSM Female Inlets

Operating Temperature: 40-180°F (5-83°C)

Operating Pressure: 15-125psi

Approximate shipping weight - 5 lbs
Warranty - 2 years parts

Solid heavy duty cast body is specification and commercial quality

Commercial Quality Features

- Rigid gooseneck spout design
- ADA-compliant 4" (102mm) wrist blade handles
- Built-in check valve to prevent cross-flow and back-flow
- Leak proof double O-ring spout design

SPECIFICATIONS:

Wall Mount Faucet to be Encore KL54 Series in the following configuration:

____ KL54-8100-RE4 3" Spout, Ceramic Valves
____ KL54-8000-RE4 3" Spout, Compression Valves
____ KL54-8102-RE4 6" Spout, Ceramic Valves
____ KL54-8002-RE4 6" Spout, Compression Valves
____ KL54-8101-RE4 8" Spout, Ceramic Valves
____ KL54-8001-RE4 8" Spout, Compression Valves

Faucet body to be constructed of polished chrome plated brass with 4" wrist blade handles. Valves to be 1/4-turn with integral check valve to prevent cross-flow and back-flow. Spout to be rigid gooseneck style with leak proof double O-ring seal design. Color coded temperature indexes shall meet international standards. 2.2gpm aerator @ 60psi standard with full flow stream bubbler screen spout tip.

Model No.	A	B	C
KL54-8100-RE4	3-1/2" (89mm)	9" (229mm)	6-3/4" (171mm)
KL54-8000-RE4			
KL54-8102-RE4	6" (152mm)	12-7/16" (316mm)	8-3/4" (222mm)
KL54-8002-RE4			
KL54-8101-RE4	8-1/2" (216mm)	12-3/4" (324mm)	7" (178mm)
KL54-8001-RE4			

COMPLIES WITH:
THE FEDERAL "REDUCTION OF LEAD
IN DRINKING WATER ACT" -
2011 - US SENATE BILL NO. S.3874
NSF/ANSI 61/9, ANNEX G

