

PROJECT NAME: _____

LOCATION: _____


SPECIFIER ITEM NO. _____ **QTY:** _____

ENCORE PART NO. _____

Encore® Deck Mount Utility Spray Assembly

KL60-2x00-xx

KL60-2000	Compression valves, no vacuum breaker
KL60-2100	Ceramic Valves, no vacuum breaker
KL60-2000-VB	Compression valves with vacuum breaker
KL60-2100-VB	Ceramic valves with vacuum breaker

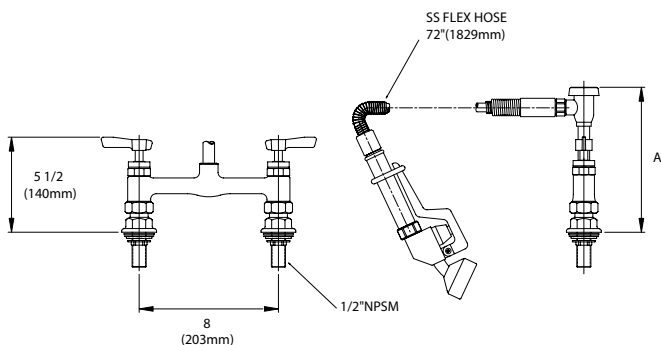

Dimensions shown in inches (mm) are for reference only and are subject to change.

1-1/8" (29mm) holes for deck are recommended to accommodate 1/2" supply nipples.
1/2" NPS inlets and 1/4" NPT compression fitting inlets
Operating Temperature: 40-180°F (5-83°C)
Operating Pressure: 15-125psi

Approximate shipping weight - 11 lbs
Warranty - 2 years parts

Solid heavy duty cast body is specification and commercial quality

Commercial Quality Features

- 1.2gpm spray face
- ADA-compliant lever handles
- 60" flexible S/S hose with Kool Grip™ handle

SPECIFICATIONS:

Deck Mount Utility Spray to be Encore KL60-2000 Series in the following configuration:

_____ KL60-2000	Compression Valves Without Vacuum Breaker
_____ KL60-2100	Ceramic Valves Without Vacuum Breaker
_____ KL60-2000-VB	Compression Valves With Vacuum Breaker
_____ KL60-2100-VB	Ceramic Valves With Vacuum Breaker

Faucet body to be constructed of polished chrome plated brass with lever handles. Valves to be 1/4-turn with integral check valve to prevent cross-flow and back-flow. Hose to be 60" flexible stainless steel with Kool Grip™ handle and vacuum breaker. Hose to have Santoprene® reinforced inner hose. Hold open ring and hose wall hook to be included.

Model No.	A
KL60-2000	7-3/16" (183mm)
KL60-2100	7-3/16" (183mm)
KL60-2000-VB	8-3/8" (213mm)
KL60-2100-VB	8-3/8" (213mm)

COMPLIES WITH:
ASME A112.18.1-2005
CSA B125.1-05
NSF/ANSI 61/9, ANNEX G
SECTION 116875 OF THE
CALIFORNIA HEALTH & SAFETY CODE
(COMMONLY KNOWN AS AB1953)
VERMONT ACT 193
UNIFORM PLUMBING CODE

