


PROJECT NAME: _____
LOCATION: _____
SPECIFIER ITEM NO. _____ **QTY:** _____
ENCORE PART NO. _____

Encore® 8" Deck Mount Faucet with
Adjustable Gooseneck Spout & 4" (102mm)
Wrist Blade Handles

KL61-8x0x-SE4 Series

KL61-8100-SE4 3" Spout, Ceramic Valves
KL61-8000-SE4 3" Spout, Compression Valves
KL61-8102-SE4 6" Spout, Ceramic Valves
KL61-8002-SE4 6" Spout, Compression Valves
KL61-8101-SE4 8" Spout, Ceramic Valves
KL61-8001-SE4 8" Spout, Compression Valves

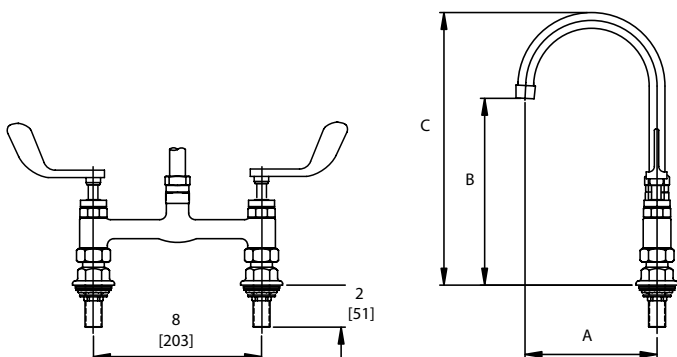

Dimensions shown in inches (mm) are for reference only
and are subject to change.

1-1/8" (29mm) hole for deck are recommended to
accommodate 1/2" supply nipples.

1/2" NPSM Male Inlets

Operating Temperature: 40-180°F (5-83°C)

Operating Pressure: 15-125psi

Approximate shipping weight - 5 lbs

Warranty - 2 years parts

Solid heavy duty cast body is specification and commercial quality

Commercial Quality Features

- Adjustable gooseneck spout design
- ADA-compliant 4" (102mm) wrist blade handles
- Built-in check valve to prevent cross-flow and back-flow
- Leak proof double O-ring spout design
- Stainless steel spout

SPECIFICATIONS:

8" Deck Mount Faucet to be Encore KL61 Series
in the following configuration:

____ KL61-8100-SE4 3" Spout, Ceramic Valves
____ KL61-8000-SE4 3" Spout, Compression Valves
____ KL61-8102-SE4 6" Spout, Ceramic Valves
____ KL61-8002-SE4 6" Spout, Compression Valves
____ KL61-8101-SE4 8" Spout, Ceramic Valves
____ KL61-8001-SE4 8" Spout, Compression Valves

Faucet body to be constructed of polished chrome plated brass. Faucet to have 8" adjustable inlet centers and wrist blade handles. Color coded temperature indexes shall meet international standards. Valve to be 1/4-turn with integral check valve to prevent cross-flow and back-flow. Spout to be stainless steel adjustable gooseneck style with leak proof double O-ring seal design. 2.2gpm aerator @ 60psi standard with full flow stream bubbler screen spout tip.

Model No.	A	B	C
KL61-8100-SE4	3-1/2" (89mm)	9-3/8" (238mm)	11-5/8" (295mm)
KL61-8000-SE4	3-1/2" (89mm)	9-3/8" (238mm)	11-5/8" (295mm)
KL61-8102-SE4	6" (152mm)	11-3/8" (289mm)	15-1/16" (383mm)
KL61-8002-SE4	6" (152mm)	11-3/8" (289mm)	15-1/16" (383mm)
KL61-8101-SE4	8" (203mm)	12-1/8" (308mm)	17-7/8" (454mm)
KL61-8001-SE4	8" (203mm)	12-1/8" (308mm)	17-7/8" (454mm)

COMPLIES WITH:
THE FEDERAL "REDUCTION OF LEAD
IN DRINKING WATER ACT" -
2011 - US SENATE BILL NO. S.3874
NSF/ANSI 61/9, ANNEX G

