


PROJECT NAME: _____
LOCATION: _____
SPECIFIER ITEM NO. _____ **QTY:** _____
ENCORE PART NO. _____

Encore® Deck Mount Single Pantry Faucet with Adjustable Gooseneck Spout and Lever Handle

KL64-9x0x-SE1 Series

KL64-9100-SE1	3" Spout, Ceramic Valves
KL64-9000-SE1	3" Spout, Compression Valves
KL64-9102-SE1	6" Spout, Ceramic Valves
KL64-9002-SE1	6" Spout, Compression Valves
KL64-9101-SE1	8" Spout, Ceramic Valves
KL64-9001-SE1	8" Spout, Compression Valves

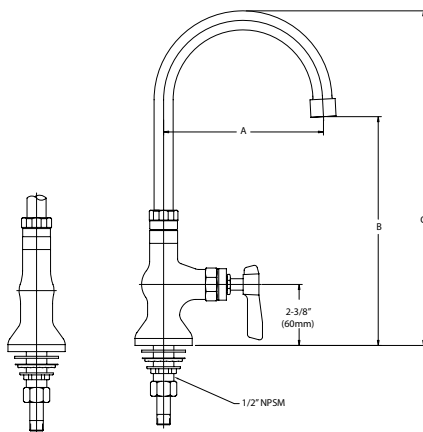

Dimensions shown in inches (mm) are for reference only and are subject to change.

1/2" NPSM Male Inlets

1/4" NPT Compression Fitting

Operating Temperature: 40-180°F (5-83°C)

Operating Pressure: 15-125psi

Note: 1-1/8" (29mm) hole for deck is recommended to accommodate 1/2" supply nipple.

Approximate shipping weight - 5 lbs

Warranty - 2 years parts

Solid heavy duty cast body is specification and commercial quality

Commercial Quality Features

- Adjustable gooseneck spout design
- ADA-compliant lever handle
- Built-in check valve to prevent cross-flow and back-flow
- Leak proof double O-ring spout design
- Stainless steel spout

SPECIFICATIONS:

Deck Mount Single Pantry Faucet to be Encore KL64 Series in the following configuration:

_____	KL64-9100-SE1	3" Spout, Ceramic Valves
_____	KL64-9000-SE1	3" Spout, Compression Valves
_____	KL64-9102-SE1	6" Spout, Ceramic Valves
_____	KL64-9002-SE1	6" Spout, Compression Valves
_____	KL64-9101-SE1	8" Spout, Ceramic Valves
_____	KL64-9001-SE1	8" Spout, Compression Valves

Faucet body to be constructed of polished chrome plated brass with lever handle. Valve to be 1/4-turn with integral check valve to prevent cross-flow and back-flow. Spout to be stainless steel adjustable gooseneck style with leak proof double O-ring seal design. 2.2gpm aerator @ 60psi standard with full flow stream bubbler screen spout tip.

Model No.	A	B	C
KL64-9100-SE1	3-1/2" (89mm)	9-3/8" (238mm)	11-5/8" (295mm)
KL64-9000-SE1	3-1/2" (89mm)	9-3/8" (238mm)	11-5/8" (295mm)
KL64-9102-SE1	6" (152mm)	11-3/8" (289mm)	15-1/16" (383mm)
KL64-9002-SE1	6" (152mm)	11-3/8" (289mm)	15-1/16" (383mm)
KL64-9101-SE1	8" (203mm)	15-1/8" (384mm)	17-7/8" (454mm)
KL64-9001-SE1	8" (203mm)	15-1/8" (384mm)	17-7/8" (454mm)

COMPLIES WITH:
THE FEDERAL "REDUCTION OF LEAD
IN DRINKING WATER ACT" -
2011 - US SENATE BILL NO. S.3874
NSF/ANSI 61/9, ANNEX G

