

PROJECT NAME: _____

LOCATION: _____


SPECIFIER ITEM NO. _____ **QTY:** _____

ENCORE PART NO. _____

**Encore® Deck Mount Single Pantry Faucet
with Adjustable Gooseneck Spout and
4" (102mm) Wrist Blade Handle**

KL64-9x0x-SE4 Series

- KL64-9100-SE4 3" Spout, Ceramic Valves
- KL64-9000-SE4 3" Spout, Compression Valves
- KL64-9102-SE4 6" Spout, Ceramic Valves
- KL64-9002-SE4 6" Spout, Compression Valves
- KL64-9101-SE4 8" Spout, Ceramic Valves
- KL64-9001-SE4 8" Spout, Compression Valves

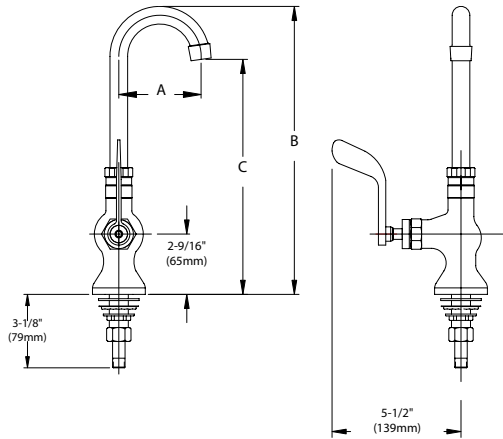

Dimensions shown in inches (mm) are for reference only
and are subject to change.

1/2" NPSM Male Inlets

1/4" NPT Compression Fitting

Operating Temperature: 40-180°F (5-83°C)

Operating Pressure: 15-125psi

Note: 1-1/8" (29mm) hole for deck is recommended to
accommodate 1/2" supply nipple.

Approximate shipping weight - 5 lbs

Warranty - 2 years parts

Solid heavy duty cast body is specification and commercial quality

Commercial Quality Features

- Adjustable gooseneck spout design
- ADA-compliant 4" (102mm) wrist blade handle
- Built-in check valve to prevent cross-flow and back-flow
- Leak proof double O-ring spout design
- Stainless steel spout

SPECIFICATIONS:

Deck Mount Single Pantry Faucet to be Encore KL64 Series
in the following configuration:

- _____ KL64-9100-SE4 3" Spout, Ceramic Valves
- _____ KL64-9000-SE4 3" Spout, Compression Valves
- _____ KL64-9102-SE4 6" Spout, Ceramic Valves
- _____ KL64-9002-SE4 6" Spout, Compression Valves
- _____ KL64-9101-SE4 8" Spout, Ceramic Valves
- _____ KL64-9001-SE4 8" Spout, Compression Valves

Faucet body to be constructed of polished chrome plated brass with 4" wrist
blade handle. Valve to be 1/4-turn with integral check valve to prevent cross-
flow and back-flow. Spout to be stainless steel adjustable gooseneck style
with leak proof double O-ring seal design. 2.2gpm aerator @ 60psi standard
with full flow stream bubbler screen spout tip.

Model No.	A	B	C
KL64-9100-SE4	3-1/2" (89mm)	9-3/8" (238mm)	11-5/8" (295mm)
KL64-9000-SE4	3-1/2" (89mm)	9-3/8" (238mm)	11-5/8" (295mm)
KL64-9102-SE4	6" (152mm)	11-3/8" (289mm)	15-1/16" (383mm)
KL64-9002-SE4	6" (152mm)	11-3/8" (289mm)	15-1/16" (383mm)
KL64-9101-SE4	8-1/2" (216mm)	12-5/8" (321mm)	15-3/8" (391mm)
KL64-9001-SE4	8-1/2" (216mm)	12-5/8" (321mm)	15-3/8" (391mm)

COMPLIES WITH:
THE FEDERAL "REDUCTION OF LEAD
IN DRINKING WATER ACT" -
2011 - US SENATE BILL NO. S.3874
NSF/ANSI 61/9, ANNEX G

