



1890 Swarthmore Avenue, PO Box 2020, Lakewood, NJ 08701
Phone: 800-526-3694, 732-363-4700, Fax: 732-364-8110
www.encoreplumbing.com • www.componenthardware.com

Encore® Deck Mount Single Handle Faucet,
with Lever Handle, Deck Plate and
Side Sprayer

KL81-2010-TE1



Operating Temperature: 40-180°F (5-83°C)
Operating Pressure: 15-125psi

Approximate shipping weight - 5 lbs
Warranty - 2 years parts

PROJECT NAME: _____
LOCATION: _____
SPECIFIER ITEM NO. _____ **QTY:** _____
ENCORE PART NO. _____


Solid heavy duty cast body is specification and commercial quality

Commercial Quality Features

- Polished chrome plated cast brass body
- 8-1/2" (216mm) swivel cast spout design
- ADA-compliant single lever handle
- Ceramic cartridges with hot limit stop

SPECIFICATIONS:

Deck Mount Faucet to be Encore KL81-2010-TE1. Faucet body to be constructed of polished chrome plated brass. Cartridge to be ceramic with hot limit stop. Spout to be 8-1/2" (216mm) swivel cast style and operates using a single lever handle with ceramic cartridge. Unit to be furnished with a 2.2 GPM (8.3 L/M) at 60 PSI aerator. Mounting hardware to be supplied for standard lavatory risers. Deck mounted spray head to have 48" vinyl nylon netted hose. Deck mounted faucet to accommodate installations up to 1-1/2" (38mm) thick.

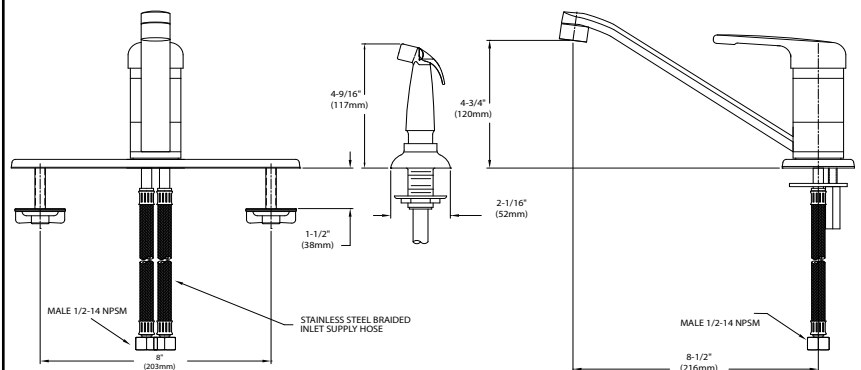

Dimensions shown in inches (mm) are for reference only
and are subject to change.

