

PROJECT NAME: _____
LOCATION: _____
SPECIFIER ITEM NO. _____ **QTY:** _____
ENCORE PART NO. _____

Encore® Mini Wall Mount Pre-Rinse
 Assembly with PowerPulse™ Spray Valve

KLP53-MINILx-xx Series



Model	Flow Rate	Valves	Spring	Wall Bracket
KLP53-MINIL1	0.45gpm	Compression	Chrome Plated	None
KLP53-MINIL2	0.67gpm			
KLP53-MINIL3	0.74gpm			
KLP53-MINIL4	1.05gpm			

KLP53-MINIL1-S	0.45gpm	Compression	Stainless Steel	None
KLP53-MINIL2-S	0.67gpm			
KLP53-MINIL3-S	0.74gpm			
KLP53-MINIL4-S	1.05gpm			

KLP53-MINIL1-BR	0.45gpm	Compression	Chrome Plated	Yes
KLP53-MINIL2-BR	0.67gpm			
KLP53-MINIL3-BR	0.74gpm			
KLP53-MINIL4-BR	1.05gpm			

KLP53-MINIL1-BS	0.45gpm	Compression	Stainless Steel	Yes
KLP53-MINIL2-BS	0.67gpm			
KLP53-MINIL3-BS	0.74gpm			
KLP53-MINIL4-BS	1.05gpm			

Approximate shipping weight - 13 lb
 Warranty - 3 years parts

Heavy duty pre-rinse assembly designed to withstand the demands of commercial operations.

PowerPulse Spray Valve

- Available in .45, .67, .74, 1.05 GPM rated flow rates
- Faster clean time - as low as 12 seconds
- Reduces water consumption by up to 58%
- Patent pending

Encore Premium Hose Feature

- 3-ply nylon reinforced Santoprene® inner hose provides maximum durability
- Interlocking helical coils of stainless steel outer hose shroud protect inner hose
- Patented stainless steel strain relief spring transfers and distributes load stress to significantly improve hose life
- High pressure hydraulic fittings on hose ends tested to 400psi
- Washerless design incorporates temperature resistant O-rings to provide leak-proof seal on all hose assemblies and hose grips

Kool Grip™ Hose Grip

- Reduces heat transfer to the hand; stays up to 30 degrees cooler than competitors' grips
- Ergonomic spray handle fits comfortably in even small hands and is easy to use

SPECIFICATIONS:

Mini Wall Mount Pre-Rinse Assembly to be Encore KLP53-MINILx-xx Series Model _____.

Pre-rinse body to be constructed of polished chrome plated brass. Pre-rinse hose to be constructed of 3-ply nylon reinforced Santoprene® permanently secured with high pressure hydraulic fittings pressure tested to 400 psi. Hose to be of washerless, leak-proof design, protected by interlocking helical stainless steel coils for maximum protection and flexibility. Patented stainless steel strain relief spring transfers load stress. Heavy-duty ergonomic gooseneck spring ensures proper hose position. A patented wall bracket with compression fitting is provided with model KLP53-MINILx-BR and KLP53-MINILx-BS to facilitate installation and give 360° of support. Riser to include spray head hook to hold spray head away from work area when not in use. Spray assembly to be equipped with Kool Grip™ handle to reduce heat transfer to hand and PowerPulse spray valve for reduced water consumption and improved cleaning time.

*All flow rates are @ 60psi

COMPLIES WITH:
 THE FEDERAL "REDUCTION OF LEAD
 IN DRINKING WATER ACT" -
 2011 - US SENATE BILL NO. S.3874
 NSF/ANSI 61/9, ANNEX G




KLP53-MINILx-xx Series

Mini Wall Mount Pre-Rinse Assembly

PREMIUM PLUMBING PRODUCTS
Encore®

1890 Swarthmore Avenue, PO Box 2020, Lakewood, NJ 08701
Phone: 800-526-3694, 732-363-4700, Fax: 732-364-8110
www.encoreplumbing.com • www.componenthardware.com

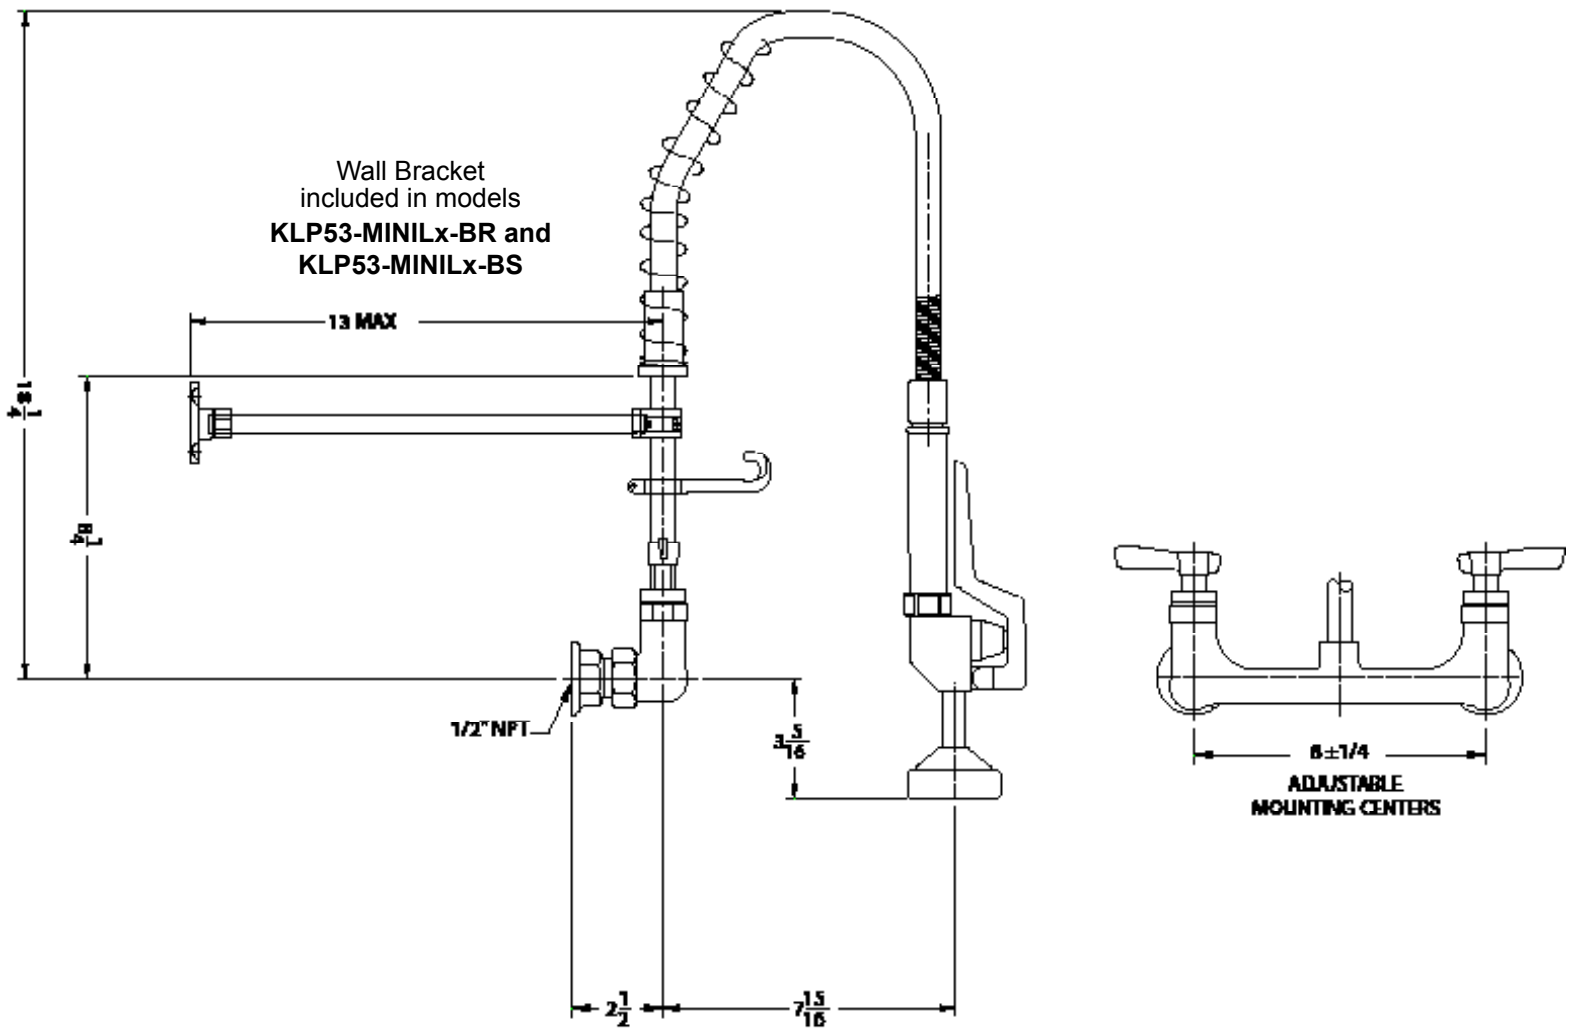

1-1/2" (29mm) holes for backsplash are
1/2" NPT Female Inlets
Operating Temperature: 40 - 180°F (5 - 83°C)
Operating Pressure: 15 - 125psi

Dimensions shown in inches (mm) are for reference only and are subject to change.