

TOP-LINE®

1890 Swarthmore Avenue, PO Box 2020, Lakewood, NJ 08701
Phone: 800-526-3694, 732-363-4700, Fax: 732-364-8110
www.encoreplumbing.com • www.componenthardware.com

PROJECT NAME: _____

LOCATION: _____


SPECIFIER ITEM NO. _____ QTY: _____

TOP-LINE PART NO. _____

TOP-LINE® Low Lead Deck Mount
Double Pantry Faucet with Swing Spout

TLL50-91xx-SE1 Series

TLL50-9106-SE1	6" Straight Swing Spout
TLL50-9108-SE1	8" Straight Swing Spout
TLL50-9110-SE1	10" Straight Swing Spout
TLL50-9112-SE1	12" Straight Swing Spout
TLL50-9114-SE1	14" Straight Swing Spout

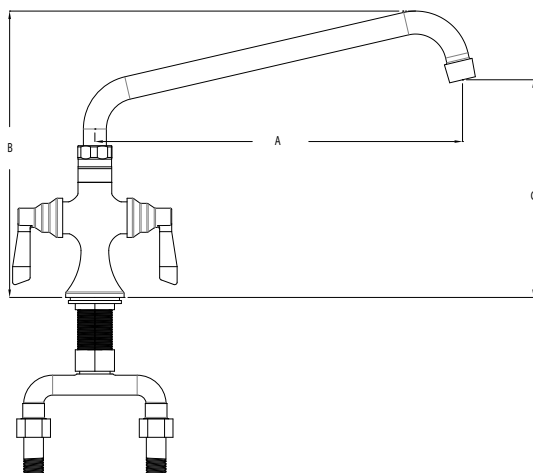

Dimensions shown in inches (mm) are for reference only
and are subject to change.

1/2" NPSM Male Inlets with
1/4" NPT Compression Fittings
Operating Temperature: 40-180°F (5-83°C)
Operating Pressure: 15-125psi

Approximate shipping weight - 5 lbs
Warranty - 2 years parts

Solid heavy duty cast brass body is specific and commercial quality

Commercial Quality Features

- Straight swing spout design
- ADA-compliant lever handles
- Leak proof double O-ring spout design
- Stainless steel spout

SPECIFICATIONS:

Low Lead Deck Mount Double Pantry Faucet to be TOP-LINE TLL50 Series
in the following configuration:

_____	TLL50-9106-SE1	6" Straight Swing Spout
_____	TLL50-9108-SE1	8" Straight Swing Spout
_____	TLL50-9110-SE1	10" Straight Swing Spout
_____	TLL50-9112-SE1	12" Straight Swing Spout
_____	TLL50-9114-SE1	14" Straight Swing Spout

Faucet body to be constructed of polished chrome plated brass. Supply
inlets to be 4" on center. Valves to be 1/4 turn ceramic type. Spout to be
stainless steel straight swing style with leak proof double O-ring seal design.
2.2gpm aerator @ 60psi standard aerator. Levers handles are color coded
HOT or COLD. Single hole deck mount faucet accommodates installations
up to 1" (25mm) thick. Faucet body incorporates a sealant recess or rubber
gasket (included) to create watertight seal around faucet base. Mounting
hardware included (1/2" NPS male inlet with compression seal and nut
for standard lavatory risers).

Model No.	A	B	C
TLL50-9106-SE1	6" (152mm)	8-1/4" (210mm)	6-1/8" (156mm)
TLL50-9108-SE1	8" (203mm)	8-3/4" (222mm)	6-3/8" (162mm)
TLL50-9110-SE1	10" (254mm)	9" (152mm)	6-7/8" (175mm)
TLL50-9112-SE1	12" (305mm)	9-1/2" (229mm)	7-1/4" (184mm)
TLL50-9114-SE1	14" (356mm)	9-3/4" (248mm)	7-1/2" (191mm)



NSF - 61/9-372 - U.P. Code
ASME A112.18.1/CSA B125.1

