

TOP-LINE®

1890 Swarthmore Avenue, PO Box 2020, Lakewood, NJ 08701
Phone: 800-526-3694, 732-363-4700, Fax: 732-364-8110
www.encoreplumbing.com • www.componenthardware.com

PROJECT NAME: _____

LOCATION: _____

SPECIFIER ITEM NO. _____ **QTY:** _____

TOP-LINE PART NO. _____

TOP-LINE® 8" OC Deck Mount Pre-Rinse Assembly

TLL61-1100-BR



Approximate shipping weight - 13 lb
Warranty - 3 years parts

All metal construction is specification and commercial quality.

Spray Valve

- Spray head hook holds spray head away from work area when not in use
- Heat resistant, non-marring, impact resistant bumper will not fatigue under extreme operating temperatures

Kool Grip™ Hose Grip

- Reduces heat transfer to the hand; stays up to 30 degrees cooler than competitors' grips
- Ergonomic spray handle fits comfortably in even small hands and is easy to use

SPECIFICATIONS:

Deck Mount Pre-Rinse Assembly to be TOP-LINE TLL61-1100-BR.

Pre-rinse faucet body to be constructed of polished chrome plated brass. Hose to be constructed of 3-ply nylon reinforced Santoprene® permanently secured with high pressure hydraulic fittings pressure tested to 400 psi. Hose to be of washerless, leak-proof design, protected by interlocking helical stainless steel coils for maximum protection and flexibility. Heavy-duty ergonomic gooseneck spring ensures proper hose position. A patented wall bracket with compression fitting is provided to facilitate installation and give 360° of support. Riser to include spray head hook to hold spray head away from work area when not in use. Spray head to be 1.6gpm @ 60psi. Spray assembly to be equipped with Kool Grip™ handle to reduce heat transfer to hand.

*All flow rates are @ 60psi

COMPLIES WITH:
THE FEDERAL "REDUCTION OF LEAD
IN DRINKING WATER ACT" –
2011 – US SENATE BILL NO. S.3874
NSF/ANSI 61/9, ANNEX G




TLL61-1100-BR

Deck Mount Pre-Rinse Assembly

TOP-LINE®

1890 Swarthmore Avenue, PO Box 2020, Lakewood, NJ 08701
Phone: 800-526-3694, 732-363-4700, Fax: 732-364-8110
www.encoreplumbing.com • www.componenthardware.com

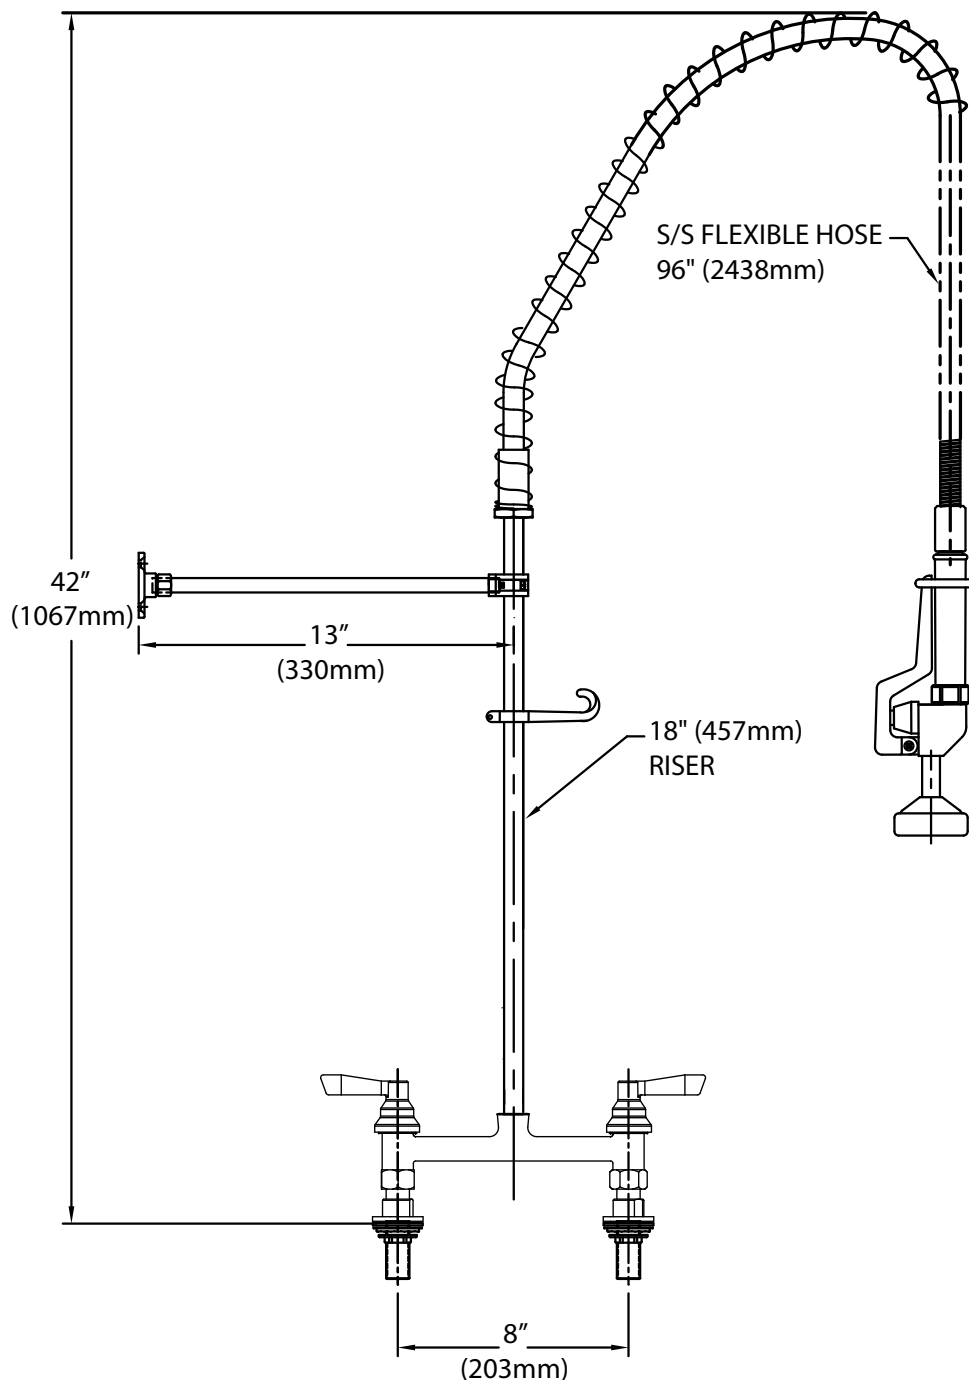

1-1/2" (29mm) holes for wall are recommended to accommodate 1/2" supply nipples.

1/2" NPSM Male Inlets

Operating Temperature: 40-180°F (5-83°C)

Operating Pressure: 15-125psi

Dimensions shown in inches (mm) are for reference only and are subject to change.